



## Demonstration of Evapo-Rust® to de-rust metal parts

®  
**EVAPORUST**



### Step 1:

Two identical sintered metal parts, both clean and rust-free.



## Evapo-Rust demonstration, continued

**EVAPOR-RUST<sup>®</sup>**




- Step 2:** Placed parts in container large enough to be completely submerged (above left). Covered parts with tap water. Soaked for 24 hours at room temperature.
- Step 3:** Removed parts from water bath. Dried in open air at room temperature. Parts exhibited significant surface corrosion (above right).



## Evapo-Rust demonstration, continued

®  
**EVAPORUST**

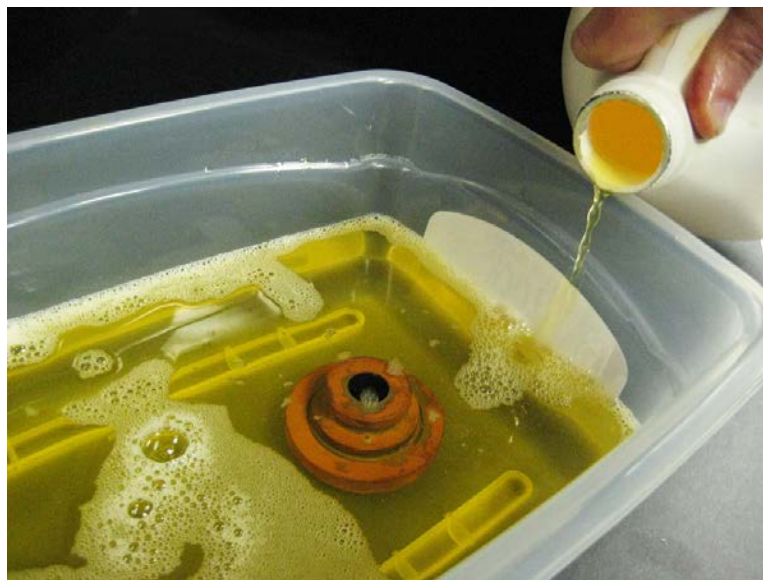

### Step 4:

Placed one of the corroded metal parts into the container and covered with Evapo-Rust. Liquid at room temperature.

10:30 a.m. Began soaking.

10:50 a.m. Pieces of corrosion started falling off the metal and onto the bottom of the plastic tub.

11:30 a.m. Part was nearly clean.



## Evapo-Rust demonstration, continued

**EVAPORUST®**



### Step 5:

12:15 p.m. Continued to observe metal as it de-rusted.



## Evapo-Rust demonstration, continued

<sup>®</sup>  
**EVAPORUST**



### Step 6:

12:45 p.m. Removed part from liquid. Poured Evapo-Rust back into gallon container, to be used again.



## Evapo-Rust demonstration, continued

<sup>®</sup>  
**EVAPORUST**



### Step 7:

3:30 p.m. Cleaned part (at right) is dry and corrosion-free.



## Conclusion

**EVAPO-RUST®**



- Repeat demonstration, using:
1. Remaining corroded metal part
  2. Evapo-Rust solution



## Conclusion

Contact your Daubert Cromwell Technical Sales Manager and/or Country Manager for product information, application assistance, samples and pricing.

<u>Territory</u>	<u>Name</u>	<u>Phone</u>	<u>email</u>
<b>USA:</b>			
Northeast	Pete Cooper	484-643-0039	<a href="mailto:pcooper@daubertcromwell.com">pcooper@daubertcromwell.com</a>
Michigan	Bill Simonson	313-701-3900	<a href="mailto:bsimonson@daubertcromwell.com">bsimonson@daubertcromwell.com</a>
Southeast	Bruce Carothers	770-335-6434	<a href="mailto:bcarothers@daubertcromwell.com">bcarothers@daubertcromwell.com</a>
Mid-Atlantic	Stephen Rafferty	919-622-9009	<a href="mailto:srafferty@daubertcromwell.com">srafferty@daubertcromwell.com</a>
Mid-Central	Gary Schneider	330-309-0924	<a href="mailto:gshneider@daubertcromwell.com">gshneider@daubertcromwell.com</a>
Midwest	Tony Siebert	773-619-1570	<a href="mailto:tsiebert@daubertcromwell.com">tsiebert@daubertcromwell.com</a>
Southwest & West	Joy Bitter	708-293-7750, ext. 169	<a href="mailto:jbitter@daubertcromwell.com">jbitter@daubertcromwell.com</a>
<b><u>International:</u></b>			
Canada:			
Eastern	Pete Cooper	+1-484-643-0039	<a href="mailto:pcooper@daubertcromwell.com">pcooper@daubertcromwell.com</a>
Ontario	Bill Simonson	+1-313-701-3900	<a href="mailto:bsimonson@daubertcromwell.com">bsimonson@daubertcromwell.com</a>
Western	Joy Bitter	+1-708-293-7750, ext. 169	<a href="mailto:jbitter@daubertcromwell.com">jbitter@daubertcromwell.com</a>
Mexico	Luis Jacome	+52 (81) 10990900	<a href="mailto:ljacome@daubertcromwell.com">ljacome@daubertcromwell.com</a>
China	Polly Huang	+86-21-61267595	<a href="mailto:polly.huang@daubertchina.com.cn">polly.huang@daubertchina.com.cn</a>
Europe	Petr Vitovec	+49 (0)89-4522036-18	<a href="mailto:pvitovec@daubertcromwell.eu">pvitovec@daubertcromwell.eu</a>
South America	Ana Kammarman	+1-240-506-0826	<a href="mailto:anak@daubertcromwell.com">anak@daubertcromwell.com</a>
Other Intl.	Scott Kotvis	+1-630-258-5138	<a href="mailto:skotvis@daubertcromwell.com">skotvis@daubertcromwell.com</a>

®  
**EVAPORUST**

